



Handleiding van de Sanifun Complete douchecabine Miranda




120x90x225cm













LEFT



RIGHT

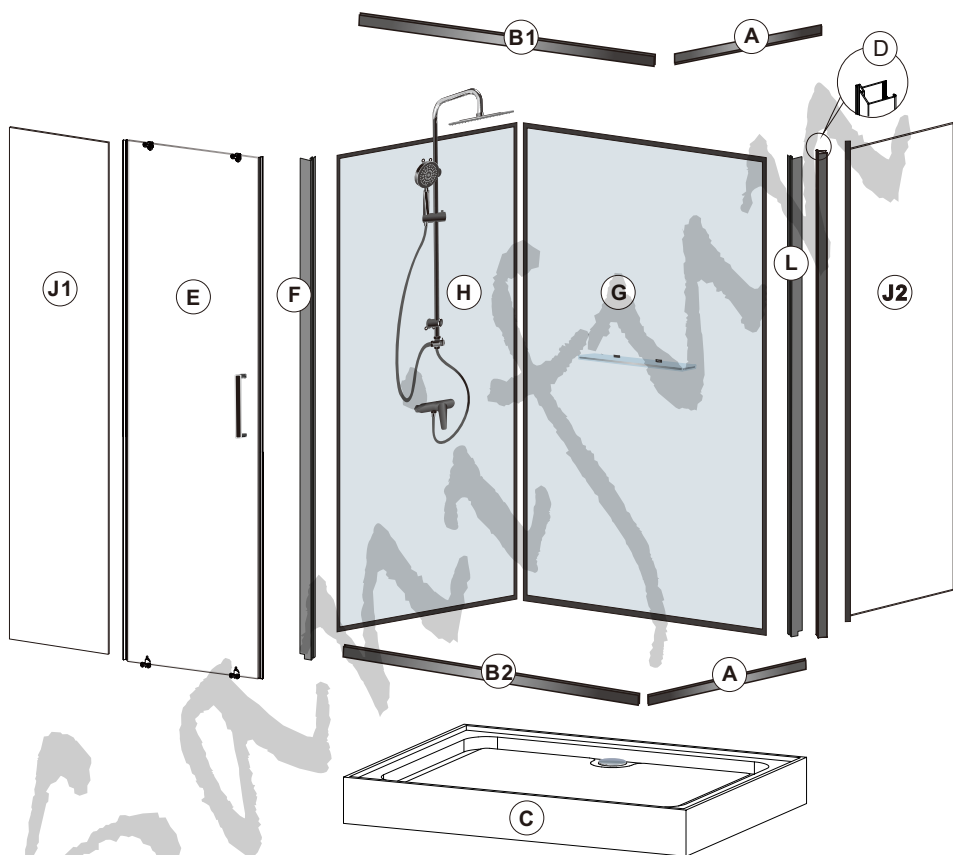


 x1	 x1	 x2	 x1
 x2	 x2	 x2	 x2
 x1	 x1	 x16	 x2
 x4	 x4	 x8	 x4
		 x1	 x1
			 x1







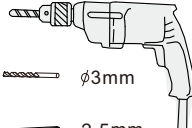
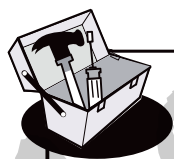













ø3mm








2.5mm


10mm



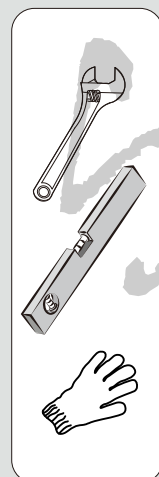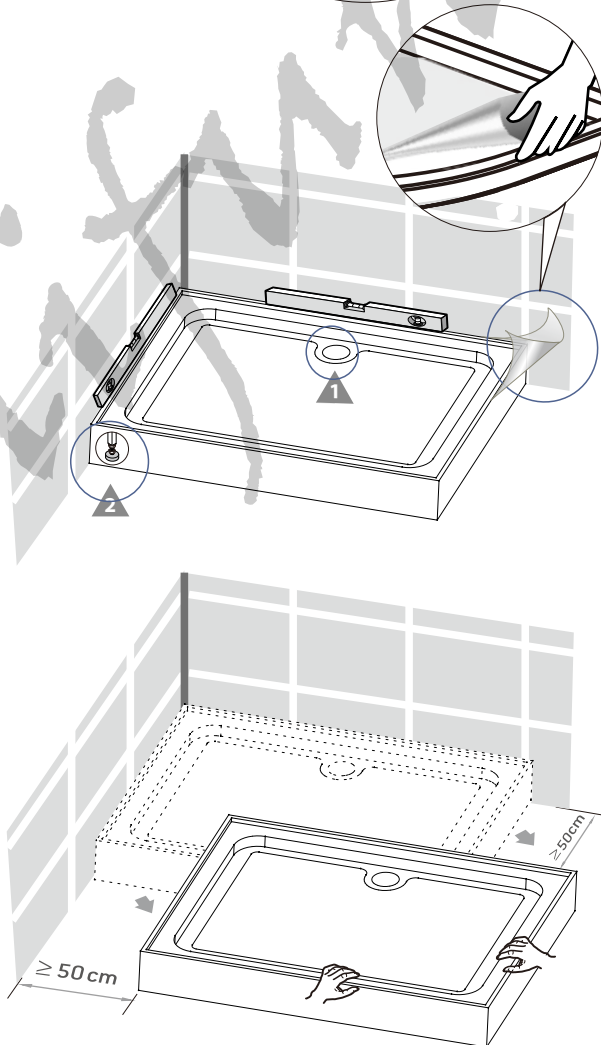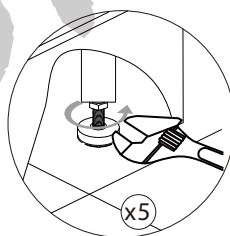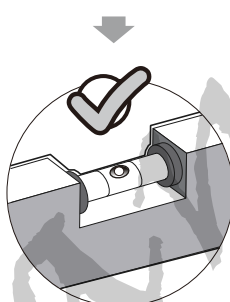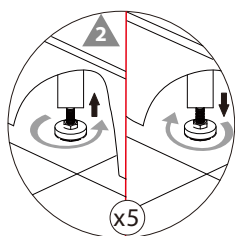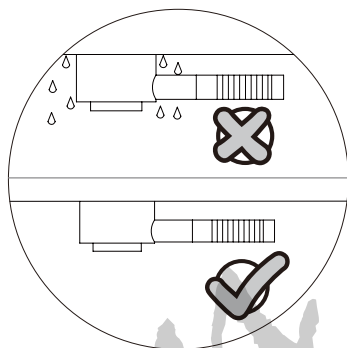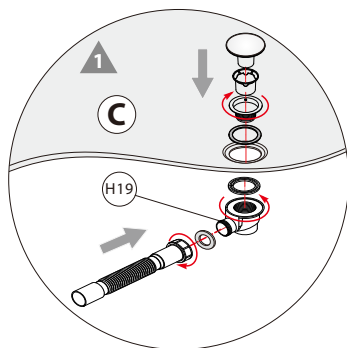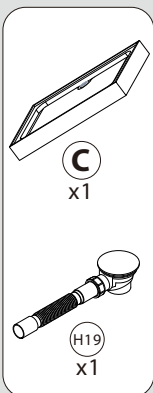

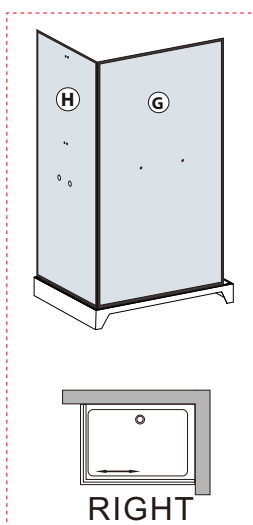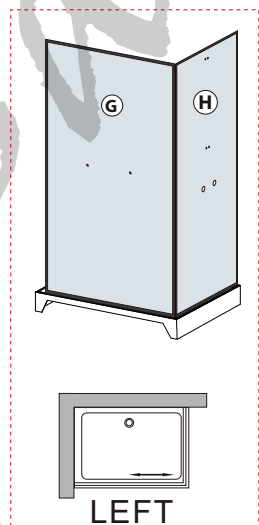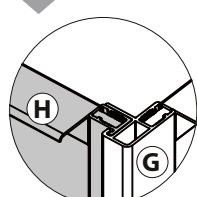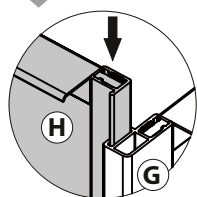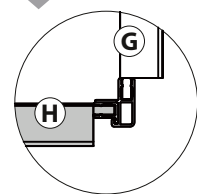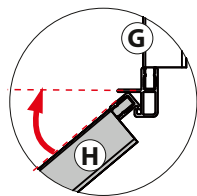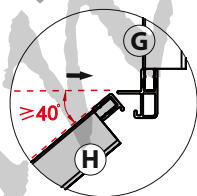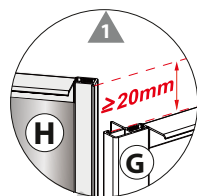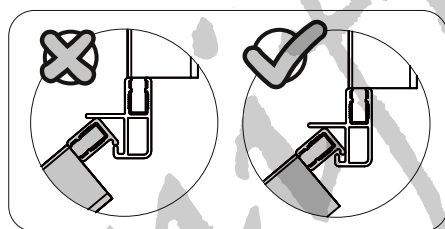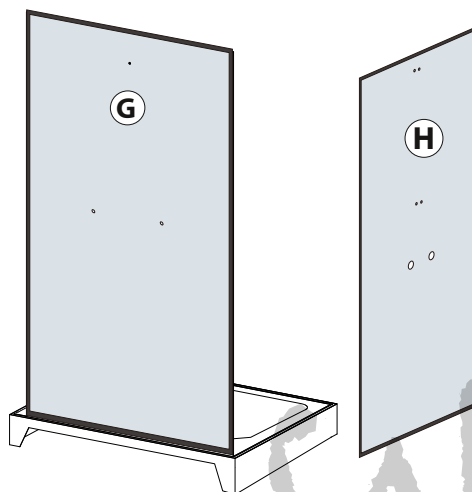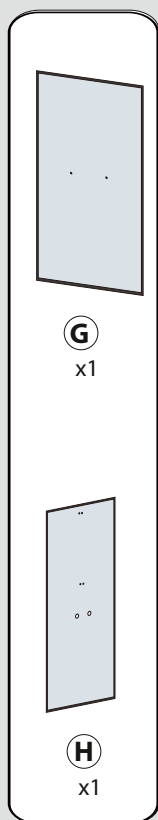

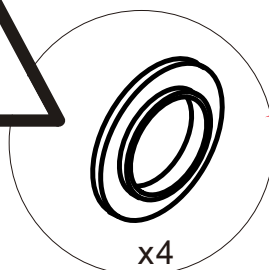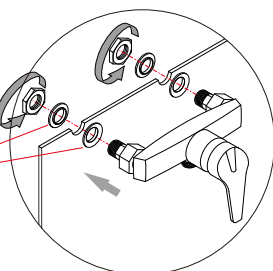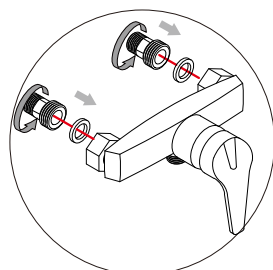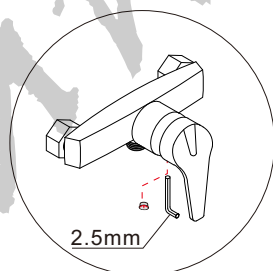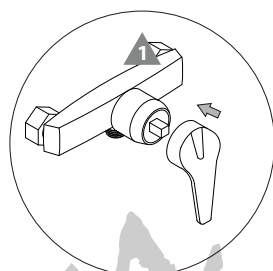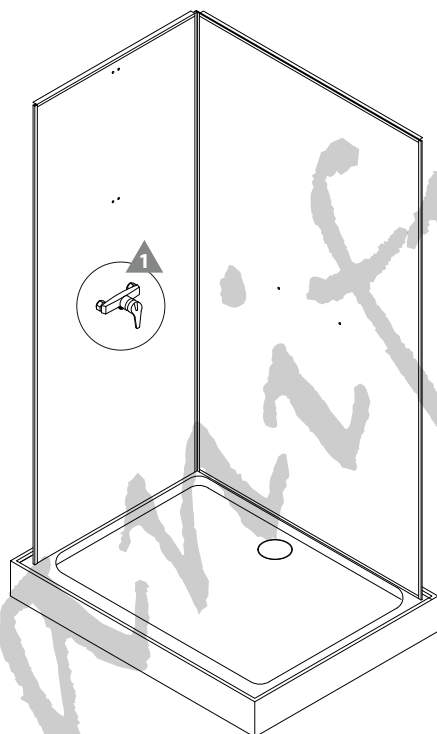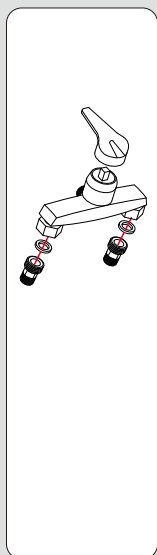

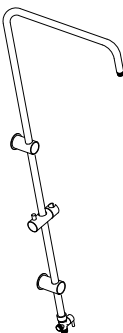

M4x20

x4



x4



x4





10mm











2









(H15)


[illegible]

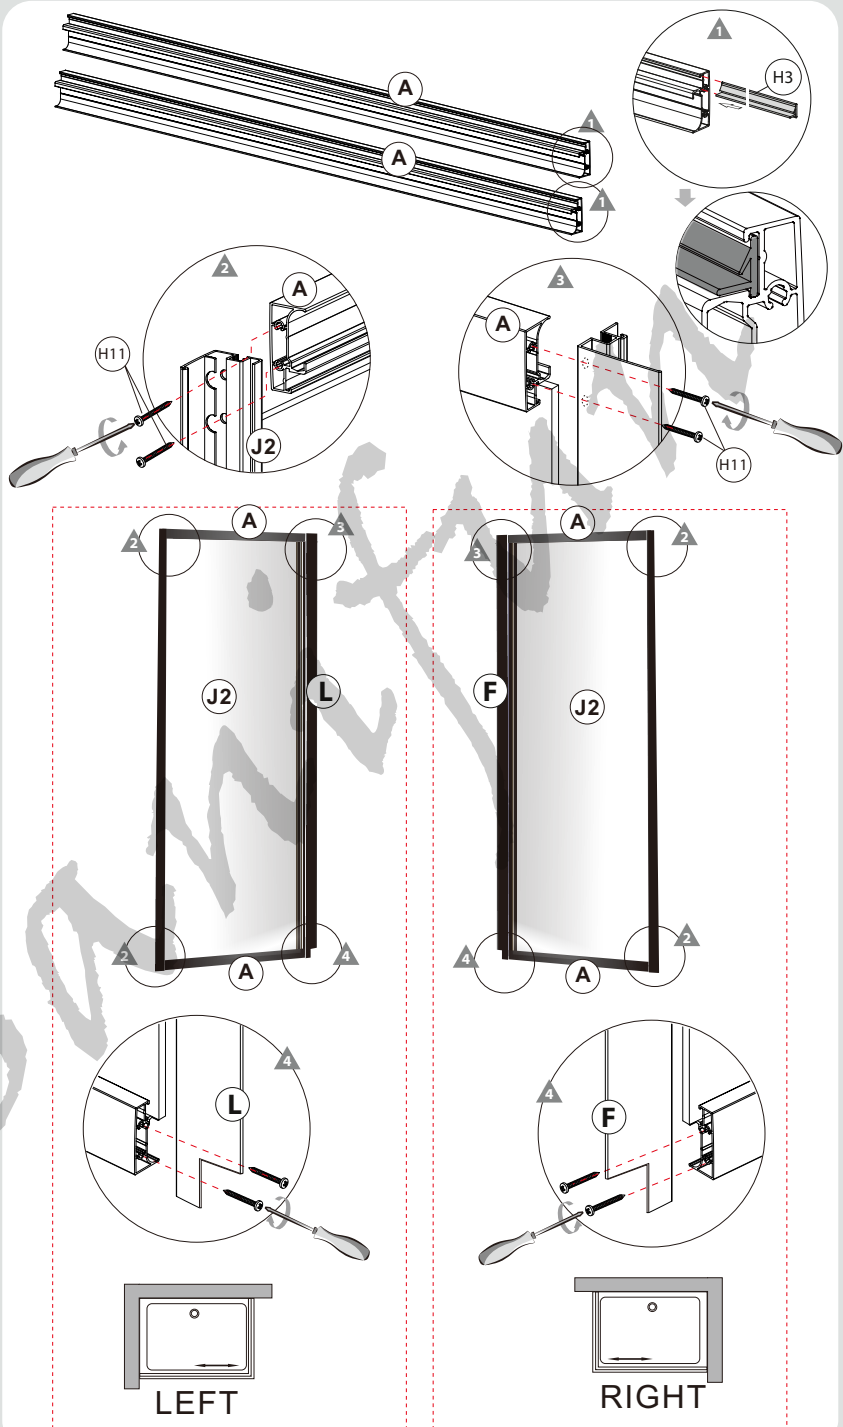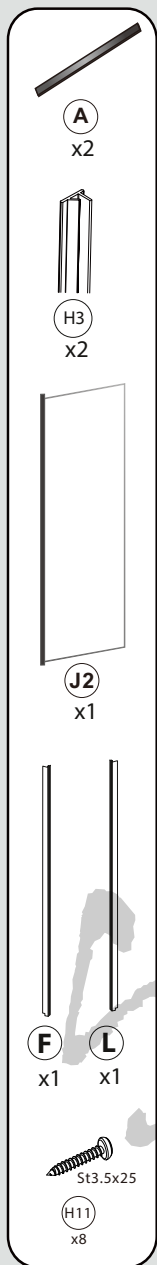

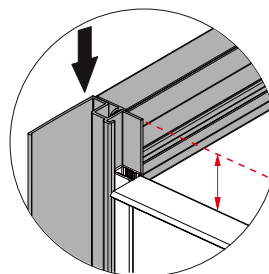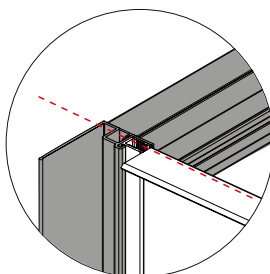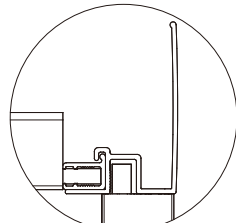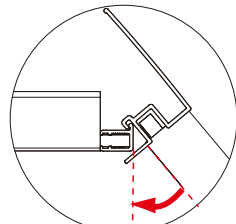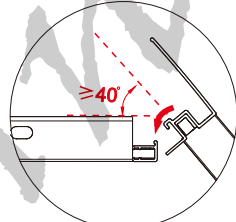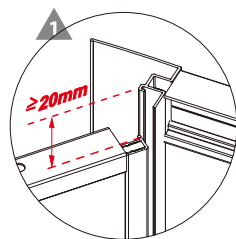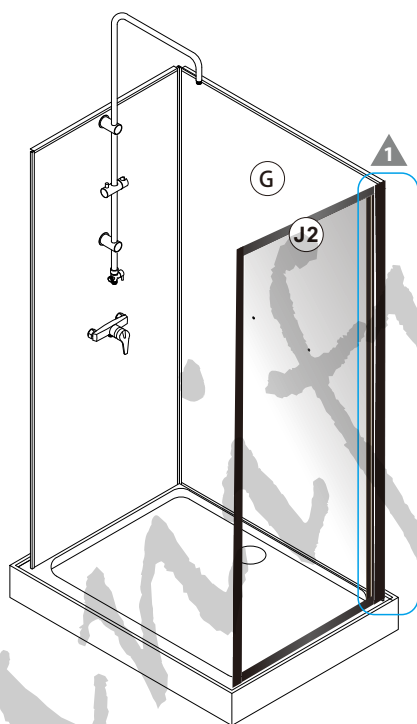

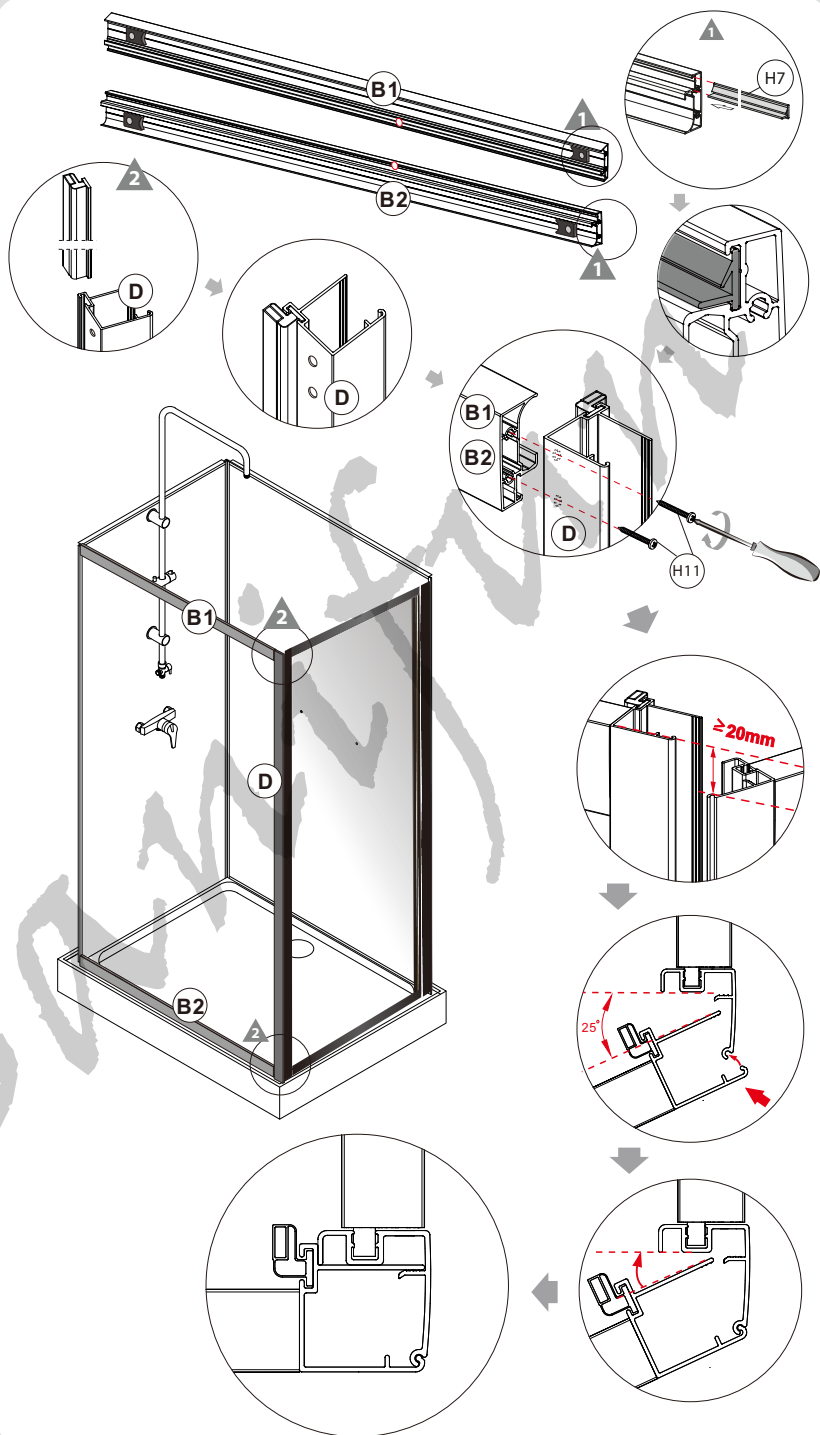

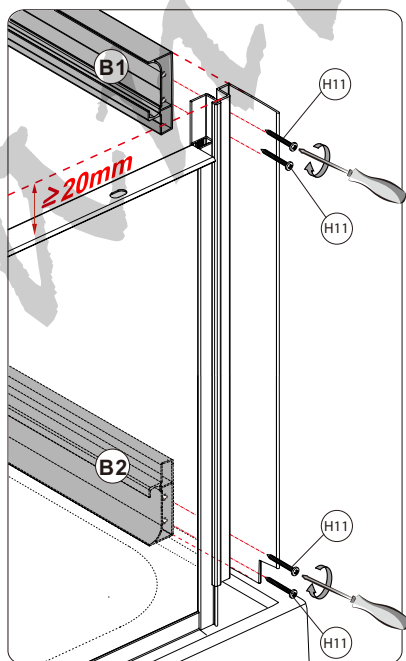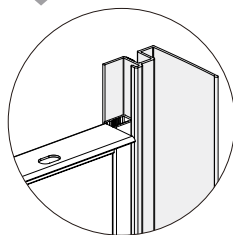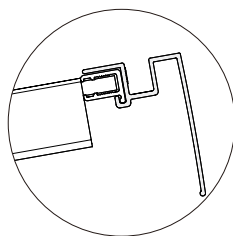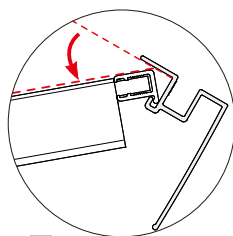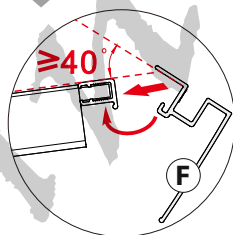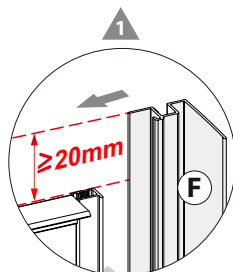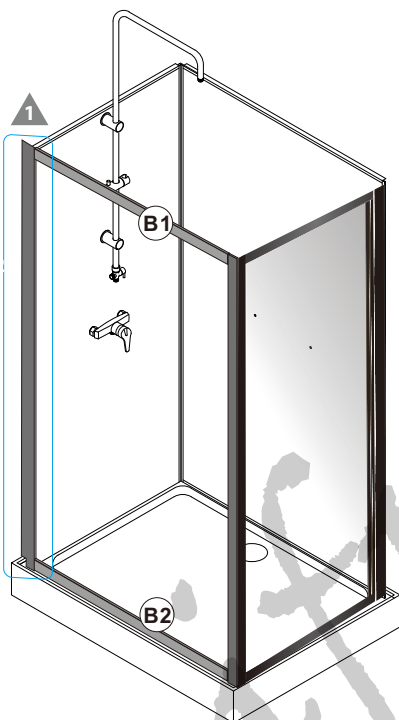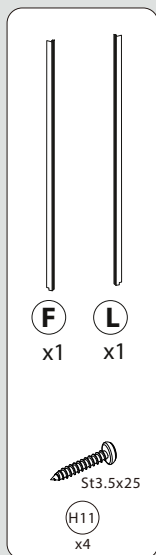



J1
x1



H8
x2











H12
x2




H4
x1



H2
x1

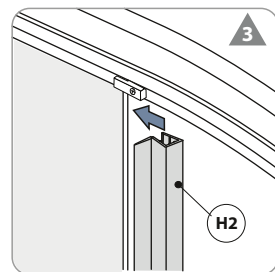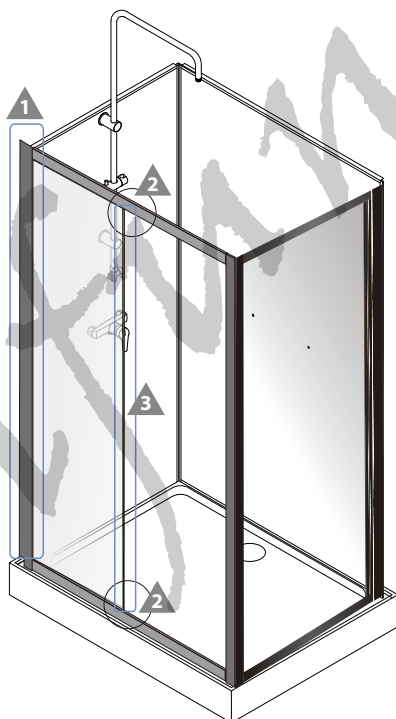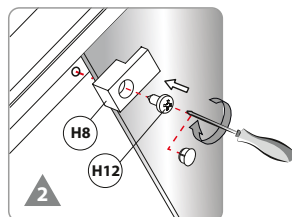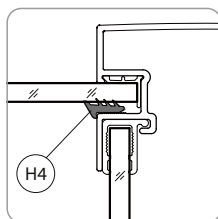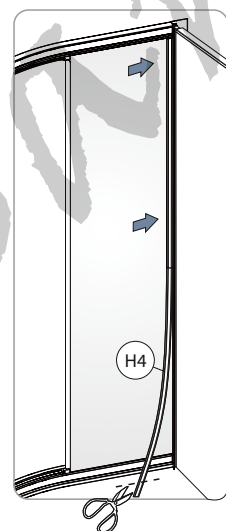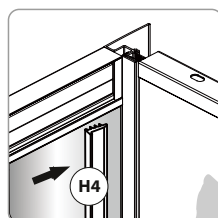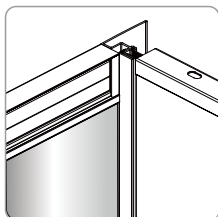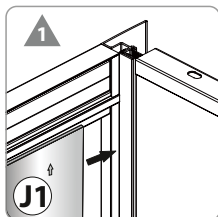

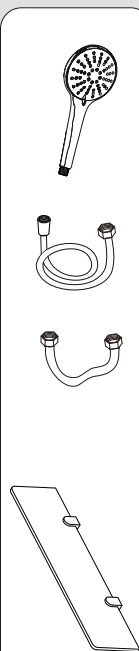











H17
x1




H13
x4



H15
x4

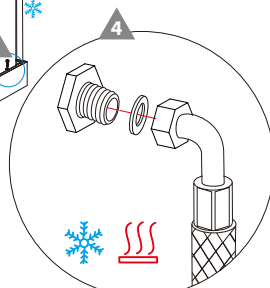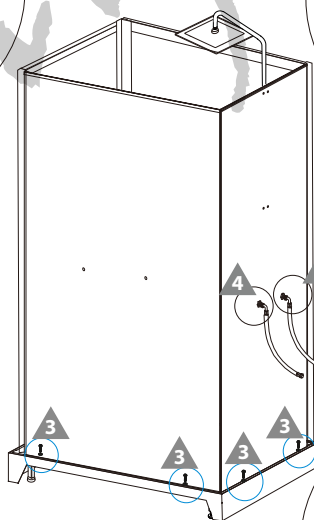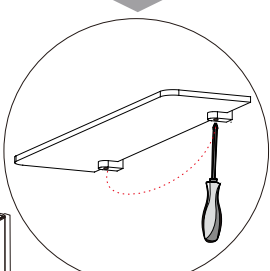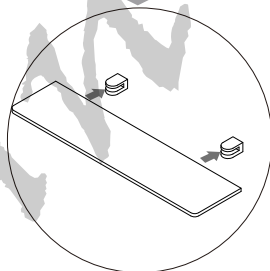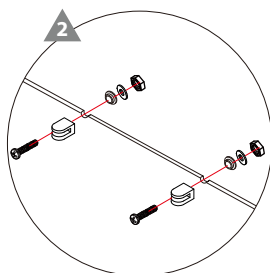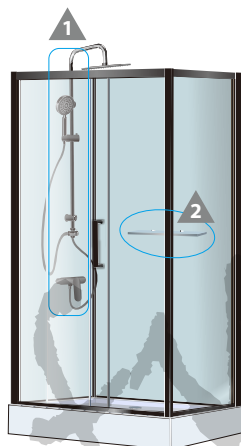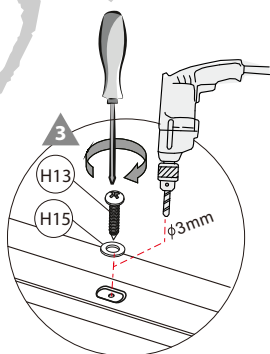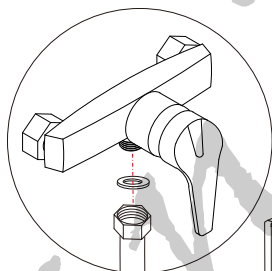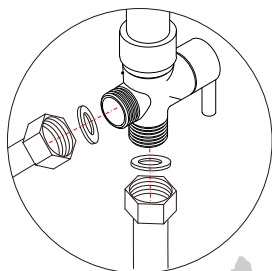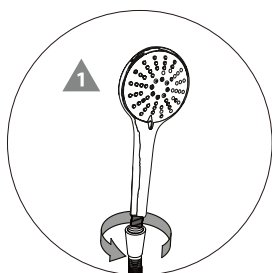



E
x1




H5
x2




H6
x2



H1
x1



H10
x1



H18
x1

